

# CUTTINGS JAR: SAMPLING INSTRUCTIONS

## Instructions:


- ① After collecting cuttings from the shaker, lightly rinse with water (for WBM systems) or diesel (for OBM systems)
- ② Open the jar and fill to the FILL LINE
- ③ Make sure to capture enough rock pieces (and minimal fluid)
- ④ Cuttings should be damp/wet but not saturated with excess fluid
- ⑤ Label every jar with the following information:

Well Name  
Sample Depth !!!  
Operator / Company !!!

## Chain of Custody (CoC)


Complete the CoC sheet with the following information:

Well Name  
Sample Depth !!!  
API# / UWI#  
Sampling Date

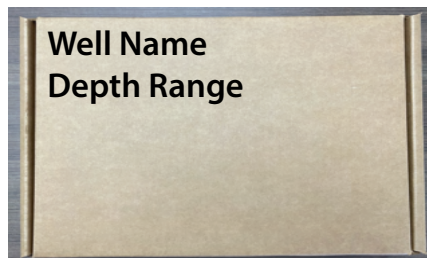

Return jars to the provided shipping box and ship via UPS GROUND to:

GeoMark Research  
ATTN: Alex Zumberge  
9748 Whithorn Dr  
Houston, TX 77095

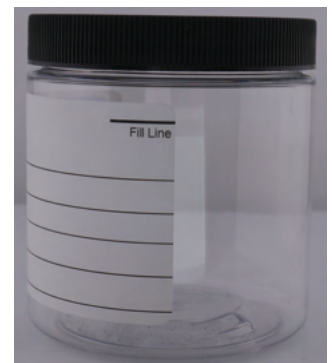

Questions?  
832-532-2470 (Jessica)  
832-532-1033 (Alex)